



Introduction - Energy Recovery Ventilators

Fresh outside air must be supplied to indoor spaces to meet minimum mandated building code legislation (or greater volumes if required to improve occupant comfort) and provide make up air or positive room pressurisation where ever needed. However, providing fresh outside air to an indoor space comes with a significant energy penalty as any temperature differential between outside and inside increases the heating or cooling load required to condition this outside air to a space neutral temperature. The greater this differential, the greater the amount of energy required. Similarly, if the humidity present in the outside air exceeds that in the space it will need to be removed to maintain a space neutral condition. The removal of this excess humidity adds a latent component to the cooling load and further increases the energy required to maintain the desired room condition. The air conditioning necessary to provide outside air at a space neutral condition is known as the fresh air load ("FAL").

The most efficient way to remove this FAL is treat it separately to the normal sensible load that arises from the space use and the building fabric heat gain or loss by employing a dedicated outdoor air system ("DOAS"). An Energy Recovery Ventilator ("ERV") is a common form of DOAS which allows heat or energy to transfer between fresh outside air and air that is being exhausted in order to minimise the FAL.


Air Change have been manufacturing and supplying its DOAS ERV Range for over 20 years to a vast array of projects across Australia. By using its unique air-to-air heat and energy recovery technology, the Air Change ERV range is able to significantly reduce the running costs of HVAC systems needing fresh outside air. With a wide product range and design options available including integrated CHW and HHW coils, there is an Air Change ERV solution for any project.

Contact one of our experienced sales engineers for a detailed unit selection.



2021 | Air Change ERV Range www.airchange.com.au

How it Works

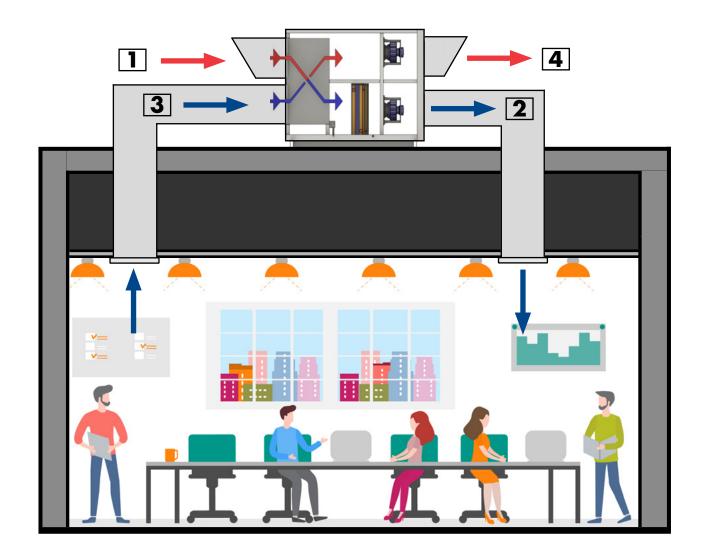

Cooling Scenario

- 100% fresh outside air enters the unit and passes through an air-to-air heat / energy exchanger where it exchanges heat (and moisture) with the return air (stage 3) that is to be exhausted.
- 2. Once the air has been precooled (or dehumidified) passing through the air-to-air heat / energy exchanger, additional cooling is provided by an integrated CHW coil to maintain the desired room temperature. As an alternative to the the CHW coil, seperate equipment running in series or parallel to the ERV can provide the additional cooling.
- 3. Cool dry air returns to the unit where it exchanges heat / energy with the hot fresh air before it is exhausted from the building.
- 4. The now hot (and humid) return air from the space is exhausted outside.

Conversely, in a heating scenario the air-to-air heat exchanger provides preheating to minimise the outside air load. An integrated HHW coil (or seperate equipment) can provide additional heating when required.


www.airchange.com.au Air Change ERV Range | 2021


2

The Advantages

The air-to-air heat / energy exchanger provides significant year-round energy savings by providing precooling in summer and preheating in winter.


3

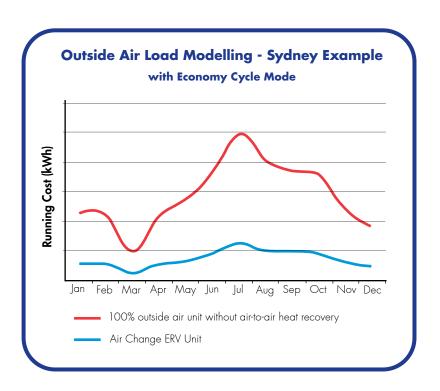

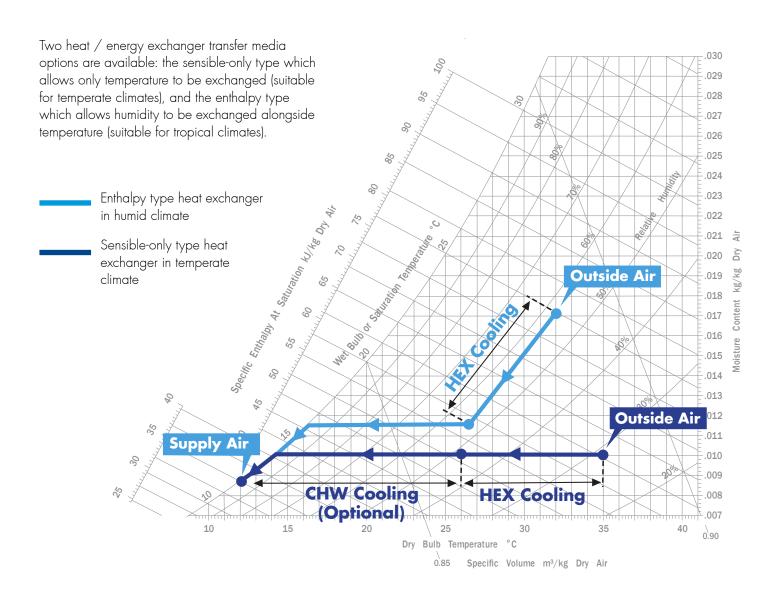

2021 | Air Change ERV Range www.airchange.com.au

Features

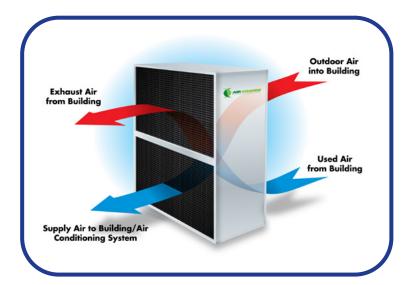

Air-to-Air Heat Exchangers

Air Change's unique counterflow plate heat / energy exchangers provide optimal heat transfer between outside air and return air, reducing the outside air load with significant running cost savings.



EC Supply Air and Exhaust Air Fans

EC fans offer optimal levels of energy efficiency. They also have high static pressure development, making them suitable for applications requiring high filtration grades or long ductwork runs. Budget friendly AC plug fans are available as an alternative option.



Economy Cycle & Return Air Bypass Modes (Optional)

Dampers can be integrated into the unit to provide the optional operating modes of Economy Cycle and Return Air Bypass. See the schematics on the following page for details.



Additional Corrosion Resistance (Optional)

Unit components can be specially selected or surface treated for corrosion resistance to ensure reliable operation and longevity in harsh environments like pool halls or seaside buildings.




CHW and HHW Coils (Optional)

CHW and / or HHW coils can be integrated into the unit to provide room cooling and heating. The coils are sized and selected according to project specific requirements. Protective epoxy coatings are standard and ensure resistance to corrosion.

www.airchange.com.au Air Change ERV Range | 2021


Operating Modes

100% Outside Air Heat Recovery (default)

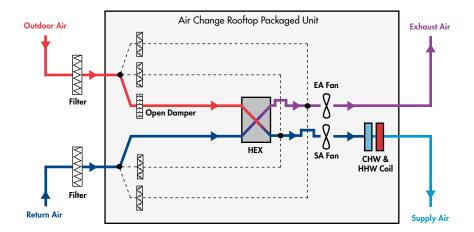

Used when the outside air temperature is hot or cold, and the indoor space requires 100% fresh outside air. The air-to-air heat / energy exchanger minimises the outside air load.


Economy Cycle (optional)

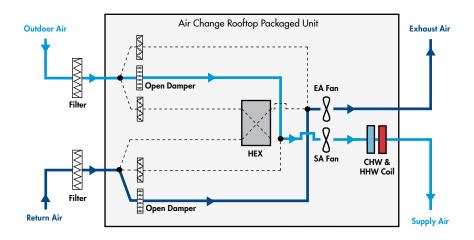

Used for free-cooling - when cold 100% outside air is brought straight into an indoor space to address the room load. Also used when the outside air temperature is mild and air-to-air heat / energy recovery is not necessary for supplying 100% fresh outside air.

Return Air Bypass (optional)

5

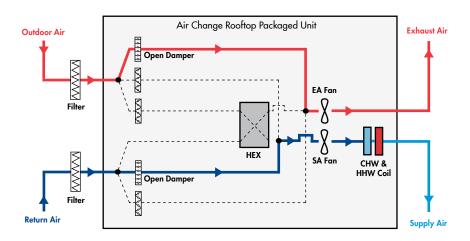

Used when 100% fresh outside air is not required (eg. when room occupancy levels are low). Outside air volume can be modulated between 0% and 100% to provide the minimum required fresh air and achieve further energy savings.


2021 | Air Change ERV Range www.airchange.com.au

Technical Data

	ERV														
Model Number:	250	550	750	1000	1500	2000	2500	3000	3500	4000	5000	6000	7000	8000	
Supply Air (I/s)	250	550	<i>7</i> 50	1000	1500	2000	2500	3000	3500	4000	5000	6000	<i>7</i> 000	8000	
Exhaust Air (1/s)	250	550	<i>7</i> 50	1000	1500	2000	2500	3000	3500	4000	5000	6000	7000	8000	
Outside Air	100%														
HEX Media		Sensible-Only or Enthalpy													
CHW & HHW Coils	Optional														
Fan Type	EC Plug Fans - Variable Speed. Optional Forward Curved Scroll Fans on Models ERV1500 and Under.														
Volts / Ph / Hz #	240/1/50	240/1/50 415/3/50													
Construction		50mm PU Sandwich Panel													
Dimensions (standard)															
Body Depth (mm)	1155	1735	1 <i>7</i> 35	1780	2060	2060	2100	2100	2100	2100	2160	2170	2170	2170	
Body Width (mm)	<i>7</i> 55	1065	1065	1400	1400	1400	2050	2050	2700	2700	3350	4000	4650	5300	
Overall Height (mm)	1065	1355	1355	1465	1770	1770	1850	1850	1770	1770	1770	1830	1830	1870	
Weight (kg)	150	400	400	500	800	800	1000	1000	1400	1400	1600	1900	2200	2500	
Dimensions (Economy Cycle)															
Body Depth (mm)	-	2100	2100	2100	2100	2100	2200	2200	2200	2200	2160	2170	-		
Body Width (mm)	-	1400	1400	1400	2050	2050	2700	2700	3350	3350	4000	5300	-		
Overall Height (mm)		1650	1650	1650	1650	1650	1900	1900	1950	1950	1820	2030	-		
Weight (kg)	-	600	600	600	1000	1000	1200	1200	1700	1700	1900	2100	-		

^{*}Specifications are subject to change. Refer to project certified documentation for finalised details.

 $^{^{\}mbox{\scriptsize \#}}$ Power input for typical EC plug fan unit.

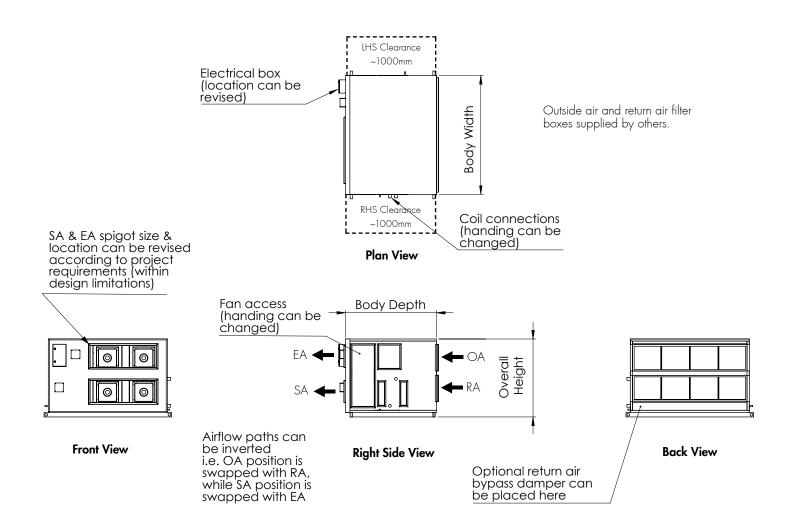

www.airchange.com.au Air Change ERV Range | 2021

Contact Us

Air Change Australia

New South Wales (Head Office)

11 Broadhurst Rd, Ingleburn NSW 2565 **Phone** (02) 8774 1400 **Email** sales@airchange.com.au

Queensland

Unit 3, 78 Logan Rd, Woolloongabba QLD 4102 **Phone** (07) 3891 1974 **Email** sales.qld@airchange.com.au

Victoria

Suite 3A, 529 Burwood Rd, Hawthorn VIC 3122

Phone (03) 9482 1010 Email sales.vic@airchange.com.au

Australian Distributors

South Australia & Northern Territory

Industrial Air

14 Princess St, Beverley SA 5009

Phone (08) 8354 0088

Email info@industrialair.com.au

Website www.industrialair.com.au

Western Australia

Industrial Air

Unit 17, 16 Sustainable Ave, Bibra Lake WA 6163

Phone (08) 9418 2448
Email paul@industrialair.com.au
Website www.industrialairwa.com.au

North Queensland

Capricorn Air Conditioning

13 Mackley St, Garbutt QLD 4814

Phone (07) 4775 5222

Email sam2@capaircon.com.au

Tasmania

Major Air - Launceston

76 York St, Launceston TAS 7250 **Phone** (03) 6344 6888 **Website** www.majorair.com.au

Major Air - Hobart

Unit 2, 10 Lampton Ave, Derwent Park TAS 7009 **Phone** (03) 6273 6455 **Website** www.majorair.com.au

Air Change South East Asia

Malaysia

No 61, Jalan i-Park 1/1 Perindustrian i-Park 81000 Bandar Indahpura, Johor **Phone** (+60) 7662 6299

New Zealand Distributors

Cooke Industries

31 Station Rd, Penrose, Auckland 1061 **Phone** +64 (0)9 579 2185 **Email** sales@cookeindustries.co.nz **Website** www.cookeindustries.co.nz

South East Asian Distributors

Thailand

Synergine (Thailand) Co.Ltd

18/6 Sukhumvit 22 Sukhumvit Rd, Khlong Toey Bangkok 10110 **Phone** (+66) 851487312 **Email** w.manprasit@synergine.com.hk

Indonesia

PT Smart Chiller Systems

CEO Suites, One Pacific Place Tower 15th Floor, Jl. Jen. Sudirman Kav. 52-53 12190 Jakarta

Email mp@smardt-indonesia.com Phone (+62) 21 2550 2413

Singapore

Energy Supplies & Engineering (S) Pte Ltd

61 Bukit Batok Crescent, #03-07B Heng Loong Building, Singapore 658078

Contact 1- Desmond Tan Email desmond@esengrg.com Phone (+65) 9736 9956

Contact 2- Andrew Nah Email andrew@esengrg.com Phone (+65) 9771 8186



For more than 20 years, Air Change has provided unique equipment and engineering solutions for local and international clients using our internationally patented heat and energy recovery technology. During that time, we have developed a comprehensive range of energy efficient products to deliver controlled indoor climate conditions satisfying the requirements of all project stakeholders: the developer, the design engineer, and the building's owner and occupants.

www.airchange.com.au

© Air Change Australia Pty Ltd 2022 202205ERV

Air Change Pty Ltd products internationally patent protected

Refrigerant Trading Authorisation No: AU23586



ARBS Industry Awards "Product Excellence" Winner 2018
AIRAH "Product of the Year" Winner 2017
AIRAH "Excellence in Innovation" Winner 2012 & 2013