




## ERV-WM

# Wall Mounted Energy Recovery Ventilator

## How it Works

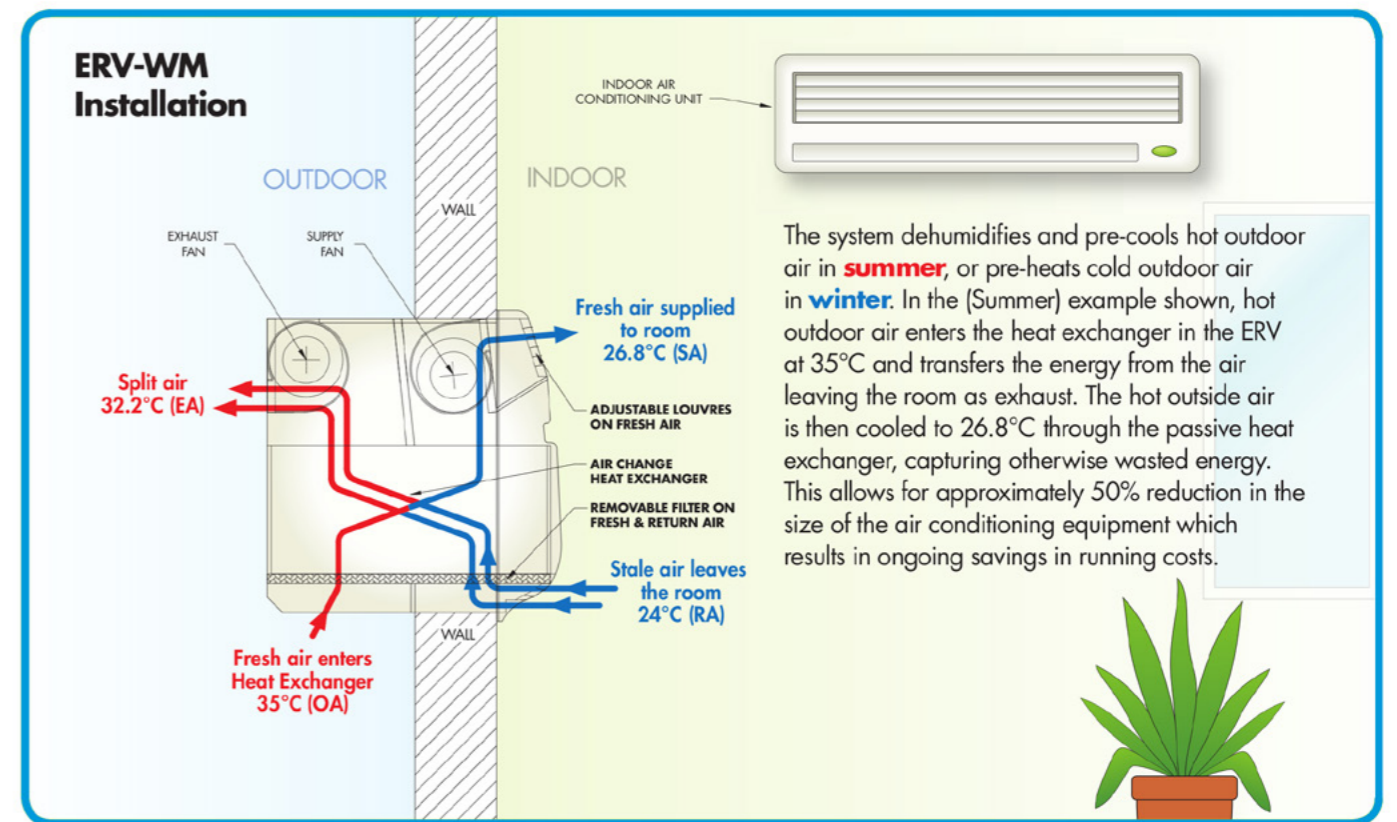

The ERV-WM unit can be located anywhere on an external wall or window of an air conditioned room, and is designed for a simple installation. Outdoor/Return air filter is accessible from inside the room.

## Technical Data

Model Number:	ERV-WM
Supply Air (l/s)	100 - 280 (Adjustable)
Exhaust Air (l/s)	100 - 280 (Adjustable)
Outside Air	100%
HEX Media	Sensible-Only or Enthalpy
Fan Type	Forward Curved Centrifugal Scroll
Fan Speed Control	3-Speed
Volts / Ph / Hz	240 / 1 / 50
Nominal Running Current (A)	0.8
<b>Dimensions</b>	
Height (mm)	805
Width (mm)	740
Depth (mm)	760
Wall Aperture (mm)	760 (H) x 710 (W)
Indoor Protrusion (mm)	170
Weight (kg)	76
<b>Sound Pressure (dBA @ 3m)</b>	
High Speed (280l/s)	52
Medium Speed (220l/s)	50
Low Speed (150l/s)	48

Specifications subject to change without notice.